
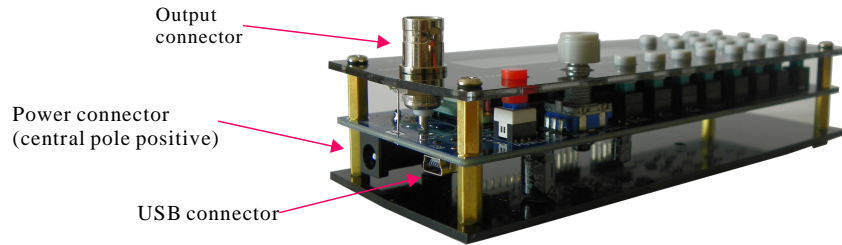



Quick Use Guide

Applicable Model: 08503, 08503K, and 08504K

Panel & Connectors

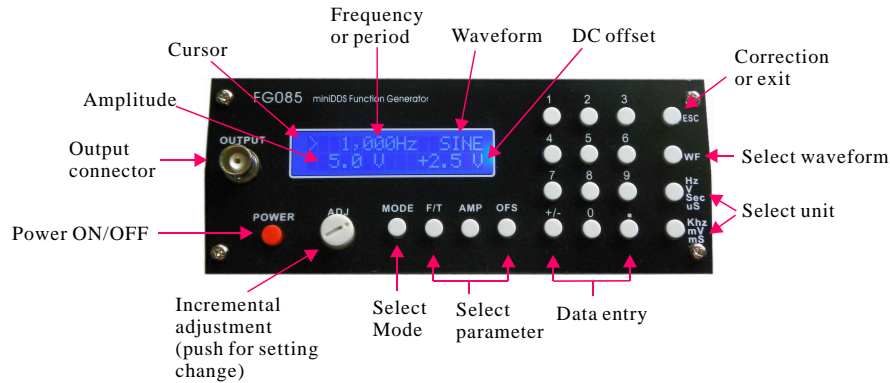

Headers & Adjustment

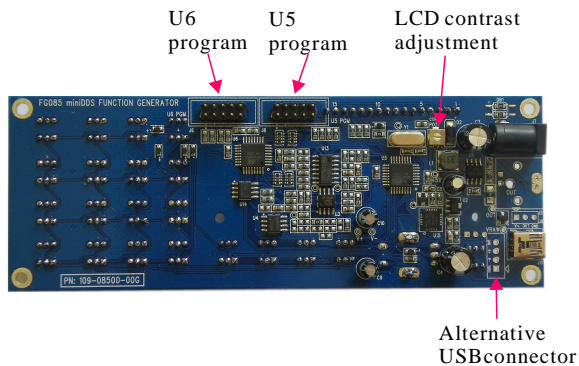

Operating

1. Constant Waveform (CW) Mode

Function	Operations
Set Frequency or Period	[F/T] + [Data Entry Keys *] + [Unit Key]
Set Amplitude	[AMP] + [Data Entry Keys *] + [Unit Key]
Set Offset	[OFS] + [Data Entry Keys *] + [Unit Key]
Incremental Adjustment	Select parameter and turn [ADJ] dial
Select Waveform	Press [WF] key

* Note: Use [ESC] to correct or cancel input

2. Servo Position Mode

Function	Operations
Set Pulse Width	[F/T] + [Data Entry Keys *] + [Unit Key]
Set Amplitude	[AMP] + [Data Entry Keys *] + [Unit Key]
Incremental Adjustment	Select parameter and turn [ADJ] dial
Change Settings	Push [ADJ] (refer to detailed manual)

* Note: Use [ESC] to correct or cancel input

3. Servo Run Mode

Use [WF] key to start and hold servo running.

4. Mode Selection

[MODE] + { Turn [ADJ] to select } + [WF]

Specification

- Ø Frequency range: 0 - 200KHz (Sine)
- Ø Frequency resolution: 1Hz
- Ø Frequency accuracy: 100 ppm
- Ø Period resolutions: 1ms
- Ø Amplitude range: 0 10V peak-to-peak
- Ø D.C. offset range: -5V +5V
- Ø Waveform memory length: 256 bytes
- Ø Sample rate: 2.5Mps
- Ø Output impedance: 50 ohm
- Ø Power supply voltage: 15V DC +/- 10%
- Ø Current consumption: < 150mA (without loading)

Please visit www.jyotech.com for detailed manual and related documents